

INFO-SERVICE

NOVEMBER 2006 Edition

Heating AIR FILTERS maintenance



The main heater core is protected by an air filter, which prevents dirt and dust from collecting on the heat exchange surfaces which can lower heater efficiency.

It is recommended to replace this filter as a dirty filter restricts airflow and reduces heat output.

To clean or replace the filter, remove the filter access panel. The operating conditions of your bus will determine how frequently the filter should be serviced.



Like the TC/3000, the heating system on the conventional is equipped with an air filter which should be verified or replaced if necessary to get maximum efficiency.



Underseat heater filter

Remove the screws holding the air outlet of the heater, pull down the panel and change the air filter if necessary.

